


ZERO CALIBRATION KIT



PRODUCES CARBON FREE AIR

- Instrument generates CO₂ free air for calibration of CO₂ sensors at “zero point”
- Usage time of 9 hours per cartridge
- Power supply via AC adapter or an internal rechargeable battery
- Easy field calibrations

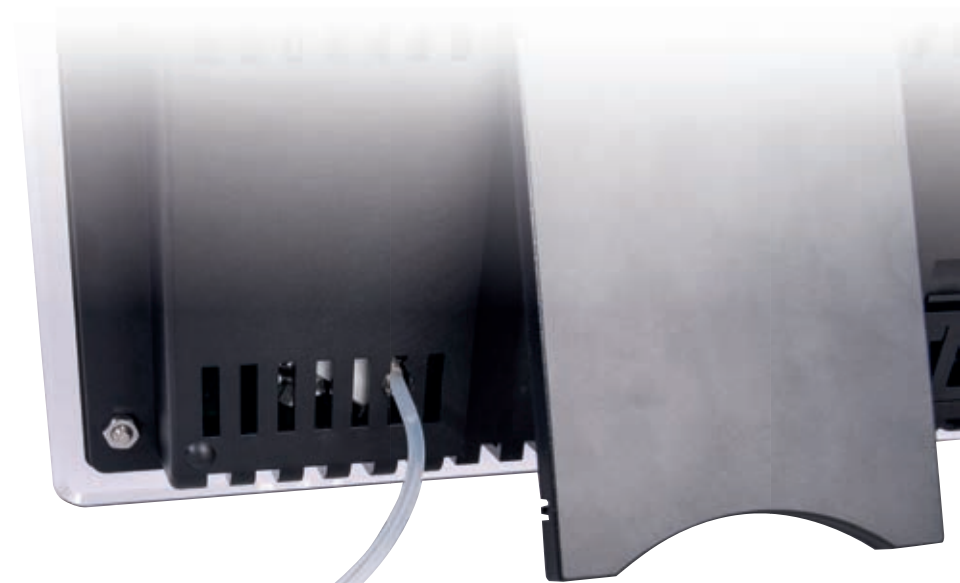

TECHNICAL INFORMATION

The Zero Calibration Kit provides a fast and cost-effective method of field calibration. The unit produces carbon dioxide free air from ambient air.

The hand held Zero Calibration Kit includes all the necessary components for calibration of any Rotronic CO₂ device. The indicators on the unit show when to charge the device and when to replace the CO₂ absorbent cartridge. The unit produces a calibration gas, free of CO₂ through chemical absorption (soda lime).

Working principle	Neutralization of CO ₂ from the ambient air
CO ₂ output	20...25 ppm CO ₂ , gas flow out
Response time	90 sec
Gas flow	320...340 ml/min
Dimensions	156 x 89 x 26 mm
Weight	270 g
Application temperature	0...45 °C
Rechargeable battery	Li-ion, 7.4 V
AC adapter	12 VDC, 0.5 A

Included

- Silicone tube 2*4 mm
- Short instruction manual
- AC-Adapter (Multicharger EU, UK, US)
- 2 x set of replacement cartridges (5 pcs. per set)



Suitable Accessories

Art. No.	Description
CO2 CARTRIDGE	Set with 5 CO ₂ cartridges

Compatible products



CP11



CF5



CF8



CO₂-Display

rotronic
MEASUREMENT SOLUTIONS

ROTRONIC AG, Grindelstrasse 6, CH - 8303 Bassersdorf, Tel. +41 44 838 11 11, Fax +41 44 838 14 83, www.rotronic.ch
 ROTRONIC Instruments (UK) Ltd, Crompton Fields, Crompton Way, Crawley, West Sussex, RH10 9EE, UK, Phone +44 (0)1293 571000, Fax +44 (0)1293 571008, www.rotronic.co.uk
 ROTRONIC Instrument Corp, 135 Engineers Road, Hauppauge, NY 11788, USA, Phone, +1 631 427-3898, Fax, +1 631 427-3902, www.rotronic-usa.com
 ROTRONIC INSTRUMENTS PTE. LTD., Inno Centre, 1003 Bukit Merah Central, #06-31, Singapore 159836, Tel. +65 63762107, Fax +65 63764439, www.rotronic.sg