

THERMADATA® WIFI LOGGERS FOR TEMPERATURE

- Receive notifications when alarm limits are exceeded
- Access recorded data worldwide via internet
- FREE software with NO ongoing or subscription charges
- Programmable high/low alarms

The new ThermaData WiFi Loggers now feature improved connectivity and convenience. With enhanced WiFi reliability, they stay connected at all times, ensuring uninterrupted data logging. An enhanced Bluetooth pairing setup also simplifies the initial setup, making it quicker and more user-friendly. These battery-powered loggers offer a cost-effective temperature monitoring system that remotely records the temperature of appliances and buildings. Each logger transmits the recorded data to a Wi-Fi router connected to the internet. This data can then be accessed and viewed from anywhere in the world using a PC, laptop, or tablet.



The loggers have a range limited to the specification of the users Wi-Fi router. Each logger has an intuitive LCD displaying; temperature, Wi-Fi and internet connection status, max/min recorded temperatures, alarm status and battery life.

At programmable intervals, the loggers will record temperature from both sensors, recording up to a maximum of 36,000 readings (18,000 from each sensor). The temperature value on the LCD display on each logger will flash to indicate that the customised preset alarms have been exceeded. Each logger communicates directly to the Wi-Fi router at set intervals to push data through the internet into ThermaData Hub. The information is available to be analysed and exported into a report format. Each unit is supplied with a USB lead and FREE wall bracket. ThermaData Hub software is available to download FREE from our website and is licence free, with no ongoing or subscription charges.

HOW DOES THE THERMADATA WIFI LOGGER WORK?

Using the unique ID of each logger, ThermaData Hub creates a secure connection between logger and software, which can be accessed and viewed anytime and anywhere with an internet connection. Each logger communicates directly to the Wi-Fi router at set intervals to push data through the internet into ThermaData Hub. The information is available to be analysed and exported into a report format

Simple setup & easy-to-use software makes the ThermaData WiFi loggers perfect for HACCP analysis

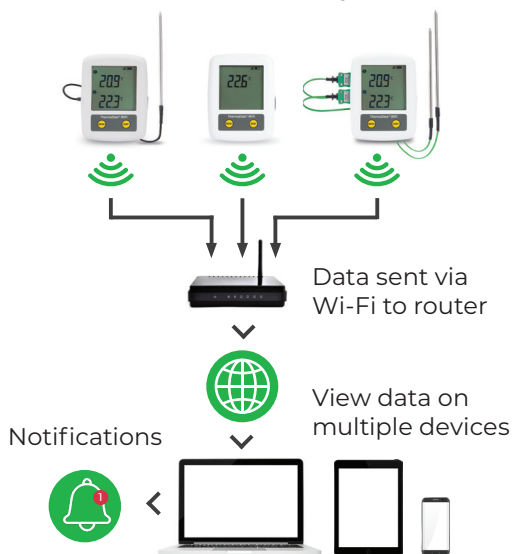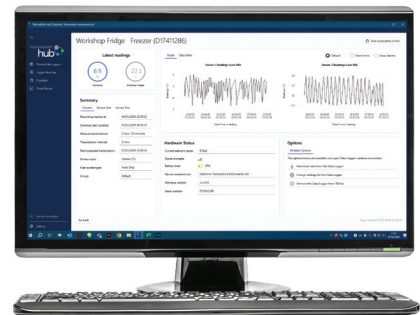

Please note: Wi-Fi routers have a range of 100 metres depending on the make, model, capabilities and setup of the router. Environmental conditions may also affect the signal strength.

